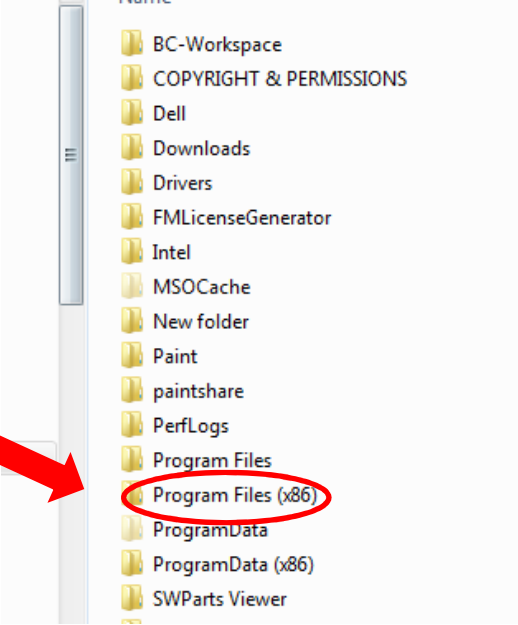
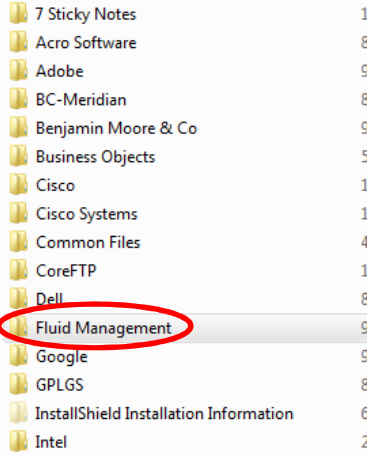

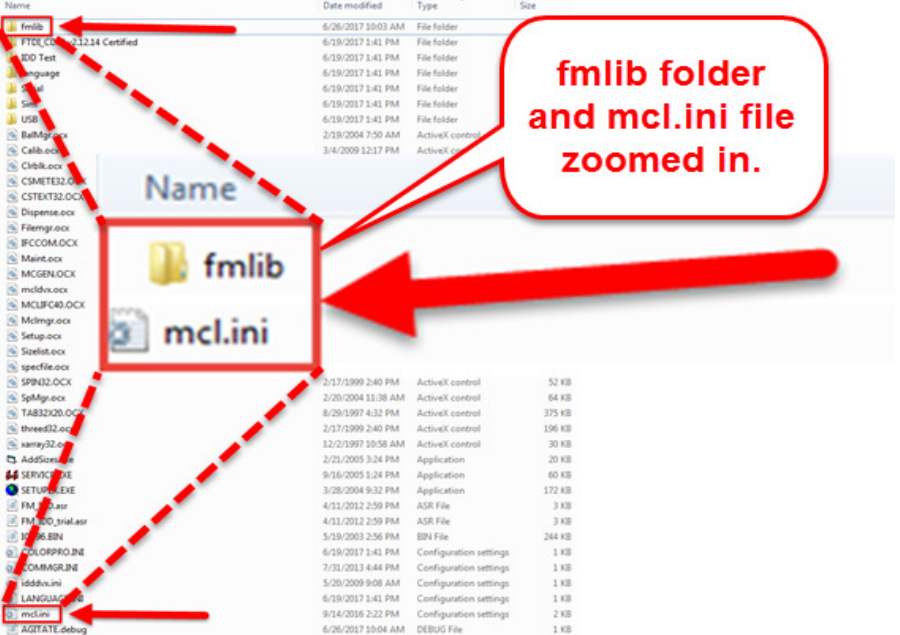


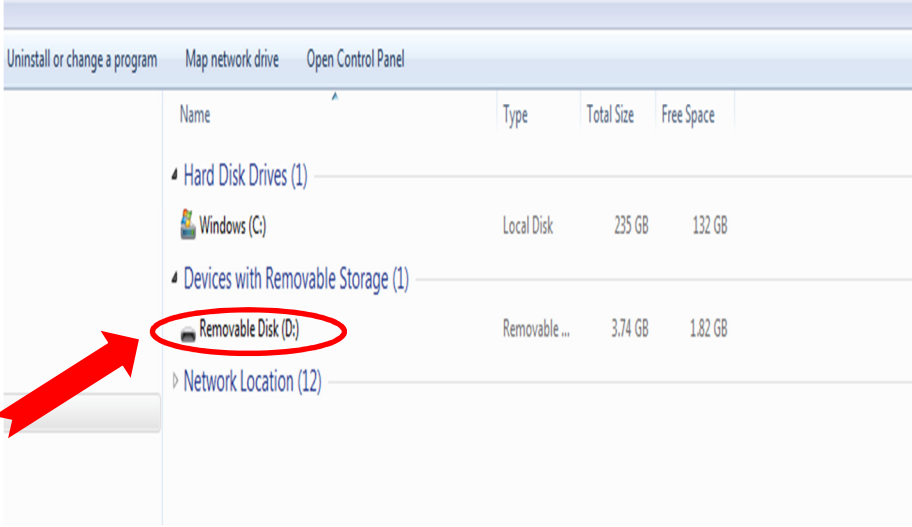
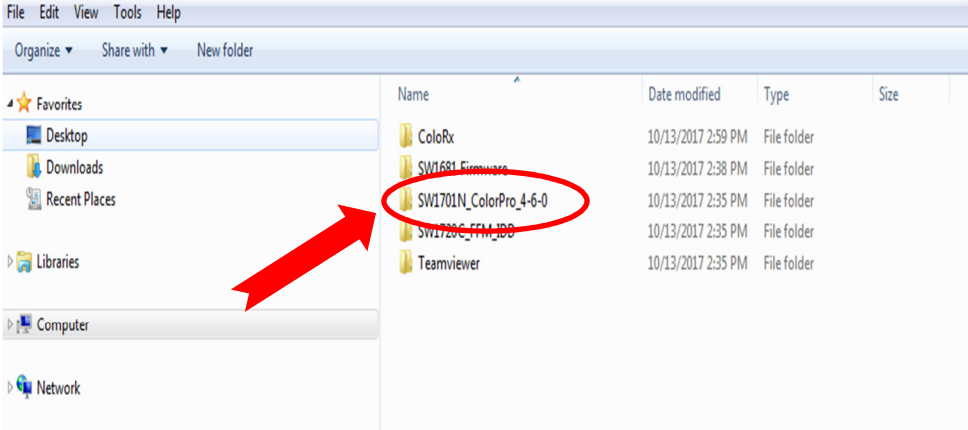
Overview

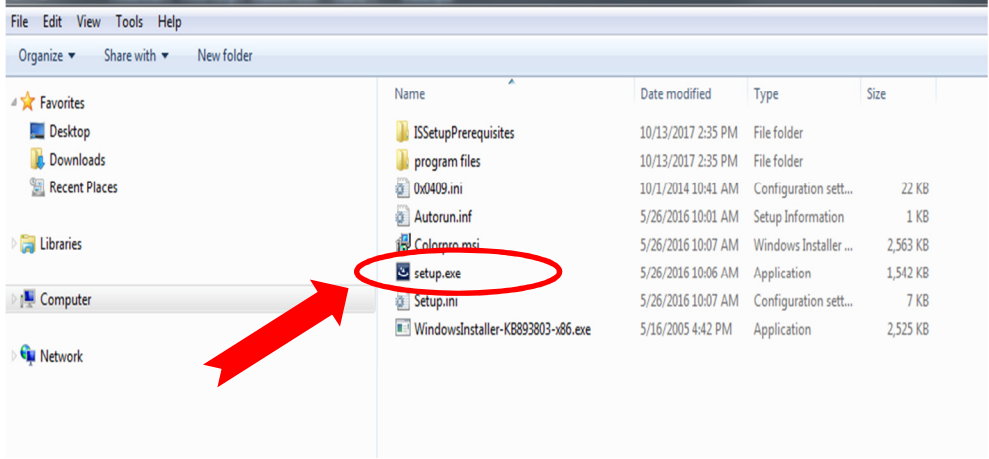
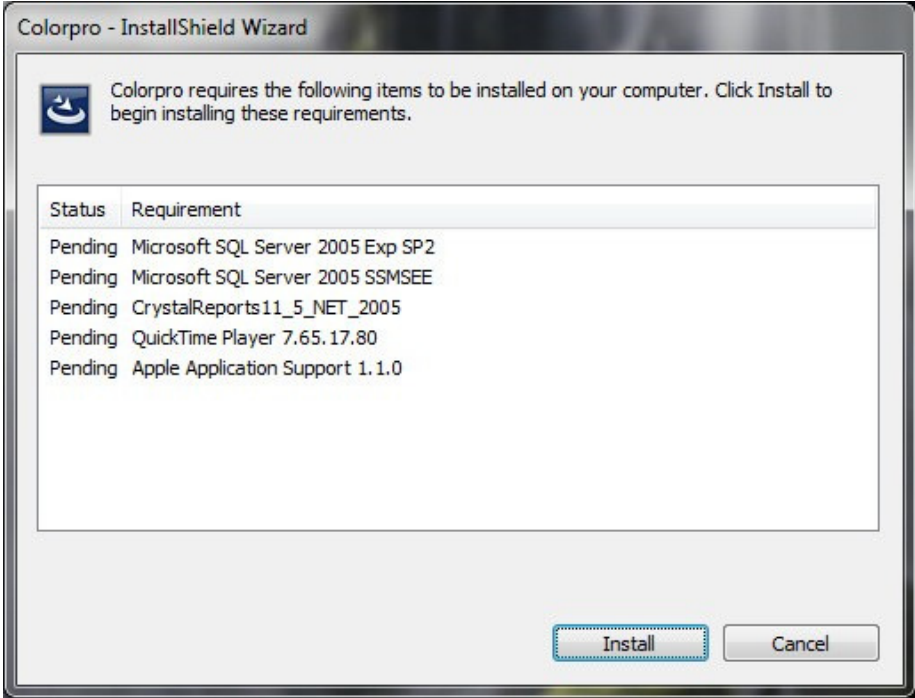
This guide will provide the proper procedure to install Color Pro 4.x program.

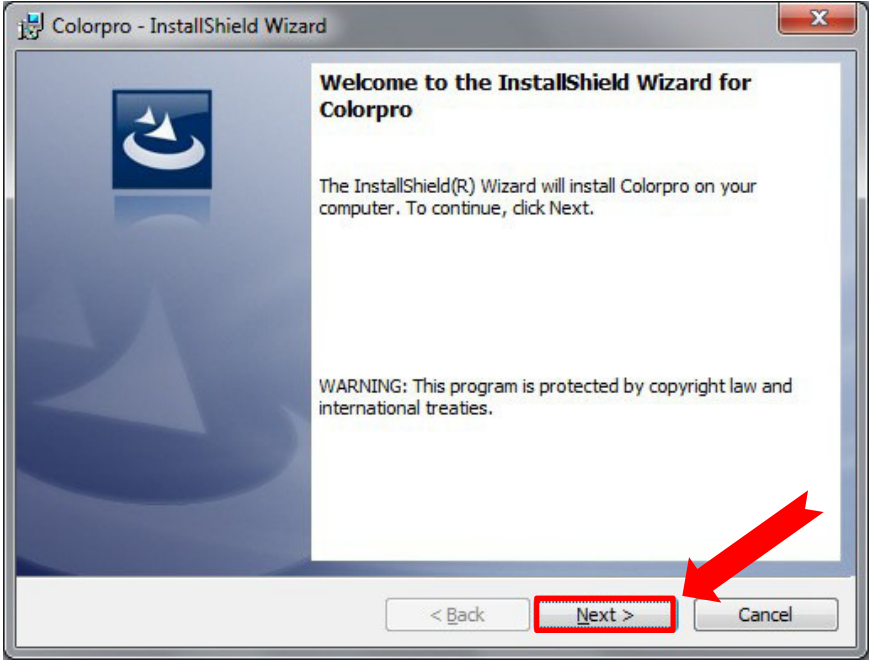
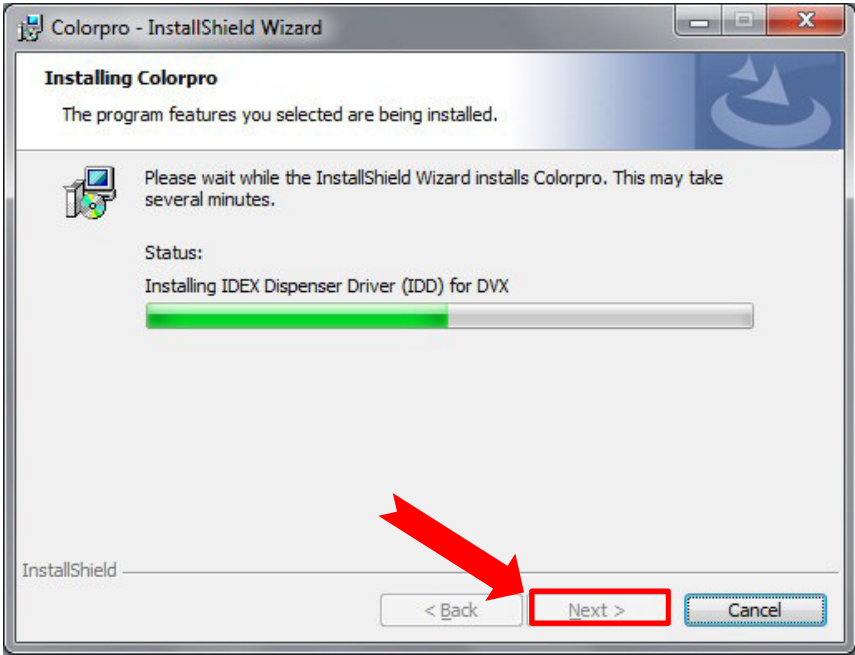
Procedure

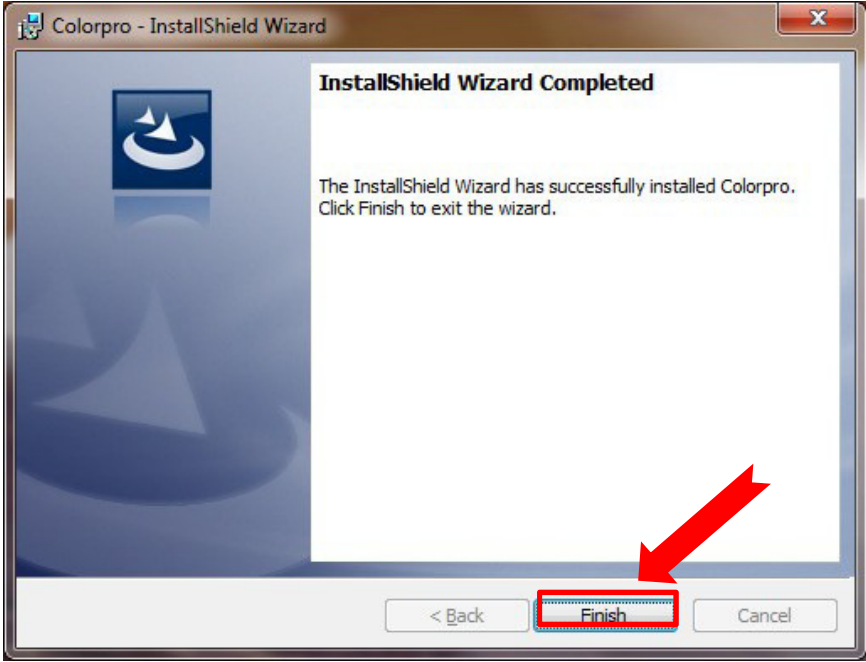
STEP	ACTION	INSTRUCTION
1.		<p>The following steps are to back-up your existing Machine Configuration/Calibration Files on your current dispenser. By backing these files you will ensure that all the settings for your machine stay the same.</p> <p>*Please note; If you do not have access to your old pc or these files, move on to step 6 with the installation of Color Pro*</p>
2.	Open Program Files folder	<p>On the ColorPro PC go to the following path: (64bit PC) C:\Program Files (x86)\Fluid Management\IDDdvx or (32bit PC) C:\Program Files\Fluid Management\IDDdvx.</p>  <p>The image shows a screenshot of a Windows File Explorer window. The left sidebar shows the navigation pane with 'Program Files (x86)' highlighted. A red arrow points from the left towards the 'Program Files (x86)' folder in the main pane. The 'Program Files (x86)' folder is also circled in red. The main pane displays a list of folders: BC-Workspace, COPYRIGHT & PERMISSIONS, Dell, Downloads, Drivers, FMLicenseGenerator, Intel, MSOCache, New folder, Paint, paintshare, PerfLogs, Program Files, Program Files (x86), ProgramData, ProgramData (x86), and SWParts Viewer.</p>

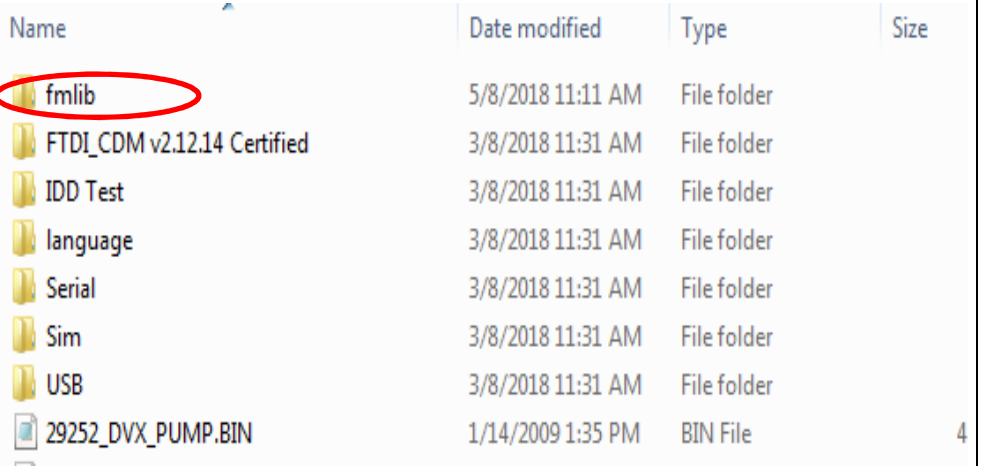
STEP	ACTION	INSTRUCTION
3.	Open the FM Folder	<p><Double Click> on the Fluid Management folder</p> 
4..	Open IDDdvx folder	<p><Double Click> on the IDDdvx folder</p> 
5.	Back Up Files	<p>A. <Copy> fmlib folder and <Right Click> on it, then <Click> on “Copy”.</p> <p>B. Paste the fmlib folder onto the desktop screen and or Flash Drive.</p> <p>C. In the IDDdvx folder locate the mcl.ini file and <Right Click> on it, then <Click> on “Copy”.</p> <p>D. <Paste> the mcl.ini file on the desktop and/or Flash Drive to back up the file.</p> <p>Note: This completes the backup process</p> 

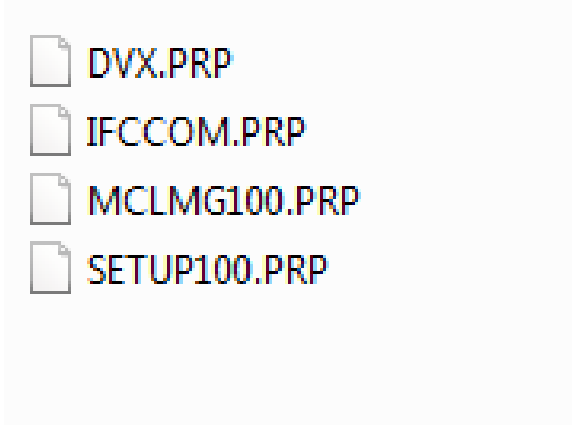
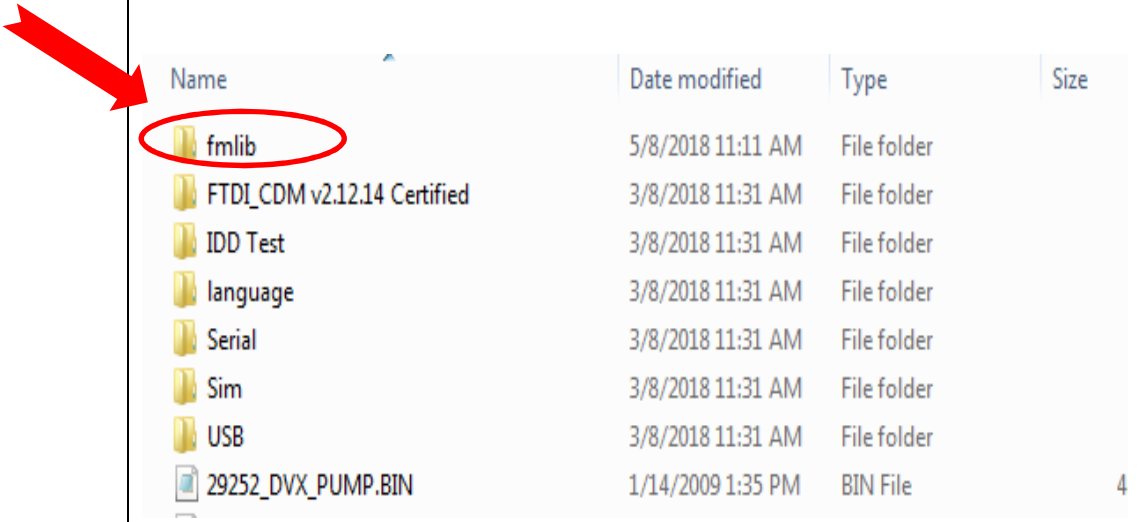
STEP	ACTION	INSTRUCTION																								
6.	Start of ColorPro Install	<p>A. Insert Flash Drive.</p> <p>B. <Double Click> on Removable Disk to open</p> <p>Note: Your drive letter may be different what appears in the example below.</p>  <p>The screenshot shows the 'My Computer' window with a table of drives:</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Type</th> <th>Total Size</th> <th>Free Space</th> </tr> </thead> <tbody> <tr> <td colspan="4">Hard Disk Drives (1)</td> </tr> <tr> <td>Windows (C:)</td> <td>Local Disk</td> <td>235 GB</td> <td>132 GB</td> </tr> <tr> <td colspan="4">Devices with Removable Storage (1)</td> </tr> <tr> <td>Removable Disk (D:)</td> <td>Removable ...</td> <td>3.74 GB</td> <td>1.82 GB</td> </tr> <tr> <td colspan="4">Network Location (12)</td> </tr> </tbody> </table>	Name	Type	Total Size	Free Space	Hard Disk Drives (1)				Windows (C:)	Local Disk	235 GB	132 GB	Devices with Removable Storage (1)				Removable Disk (D:)	Removable ...	3.74 GB	1.82 GB	Network Location (12)			
Name	Type	Total Size	Free Space																							
Hard Disk Drives (1)																										
Windows (C:)	Local Disk	235 GB	132 GB																							
Devices with Removable Storage (1)																										
Removable Disk (D:)	Removable ...	3.74 GB	1.82 GB																							
Network Location (12)																										
7.	Continuing Color Pro Installation	<p>C. <Double Click> on “SW1701”.</p>  <p>The screenshot shows a Windows Explorer window with a table of folders:</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Date modified</th> <th>Type</th> <th>Size</th> </tr> </thead> <tbody> <tr> <td>ColorRx</td> <td>10/13/2017 2:59 PM</td> <td>File folder</td> <td></td> </tr> <tr> <td>SW1681_Firmware</td> <td>10/13/2017 2:38 PM</td> <td>File folder</td> <td></td> </tr> <tr> <td>SW1701N_ColorPro_4-6-0</td> <td>10/13/2017 2:35 PM</td> <td>File folder</td> <td></td> </tr> <tr> <td>SW1720C_FFM_JDB</td> <td>10/13/2017 2:35 PM</td> <td>File folder</td> <td></td> </tr> <tr> <td>Teamviewer</td> <td>10/13/2017 2:35 PM</td> <td>File folder</td> <td></td> </tr> </tbody> </table>	Name	Date modified	Type	Size	ColorRx	10/13/2017 2:59 PM	File folder		SW1681_Firmware	10/13/2017 2:38 PM	File folder		SW1701N_ColorPro_4-6-0	10/13/2017 2:35 PM	File folder		SW1720C_FFM_JDB	10/13/2017 2:35 PM	File folder		Teamviewer	10/13/2017 2:35 PM	File folder	
Name	Date modified	Type	Size																							
ColorRx	10/13/2017 2:59 PM	File folder																								
SW1681_Firmware	10/13/2017 2:38 PM	File folder																								
SW1701N_ColorPro_4-6-0	10/13/2017 2:35 PM	File folder																								
SW1720C_FFM_JDB	10/13/2017 2:35 PM	File folder																								
Teamviewer	10/13/2017 2:35 PM	File folder																								

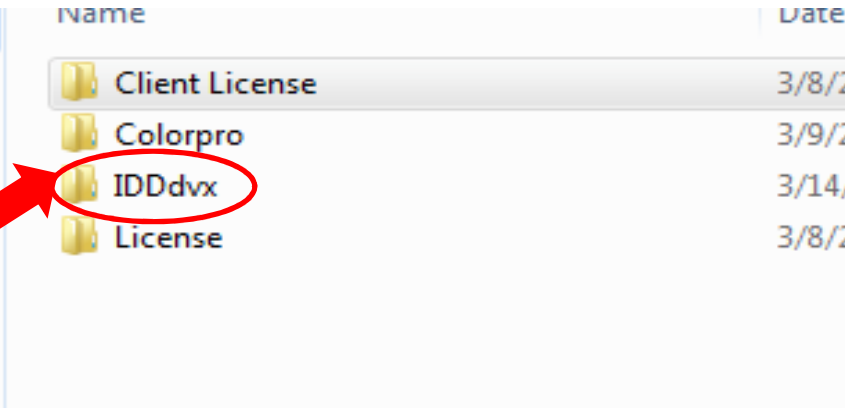
STEP	ACTION	INSTRUCTION																																				
8.	Continuing ColorPro Installation	<p><Double Click> on “setup.exe”.</p>  <p>The screenshot shows a Windows File Explorer window with the following table of files:</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Date modified</th> <th>Type</th> <th>Size</th> </tr> </thead> <tbody> <tr> <td>ISSetupPrerequisites</td> <td>10/13/2017 2:35 PM</td> <td>File folder</td> <td></td> </tr> <tr> <td>program files</td> <td>10/13/2017 2:35 PM</td> <td>File folder</td> <td></td> </tr> <tr> <td>0x0409.ini</td> <td>10/1/2014 10:41 AM</td> <td>Configuration sett...</td> <td>22 KB</td> </tr> <tr> <td>Autorun.inf</td> <td>5/26/2016 10:01 AM</td> <td>Setup Information</td> <td>1 KB</td> </tr> <tr> <td>Colorpro.msi</td> <td>5/26/2016 10:07 AM</td> <td>Windows Installer ...</td> <td>2,563 KB</td> </tr> <tr> <td>setup.exe</td> <td>5/26/2016 10:06 AM</td> <td>Application</td> <td>1,542 KB</td> </tr> <tr> <td>Setup.ini</td> <td>5/26/2016 10:07 AM</td> <td>Configuration sett...</td> <td>7 KB</td> </tr> <tr> <td>WindowsInstaller-KB893803-x86.exe</td> <td>5/16/2005 4:42 PM</td> <td>Application</td> <td>2,525 KB</td> </tr> </tbody> </table>	Name	Date modified	Type	Size	ISSetupPrerequisites	10/13/2017 2:35 PM	File folder		program files	10/13/2017 2:35 PM	File folder		0x0409.ini	10/1/2014 10:41 AM	Configuration sett...	22 KB	Autorun.inf	5/26/2016 10:01 AM	Setup Information	1 KB	Colorpro.msi	5/26/2016 10:07 AM	Windows Installer ...	2,563 KB	setup.exe	5/26/2016 10:06 AM	Application	1,542 KB	Setup.ini	5/26/2016 10:07 AM	Configuration sett...	7 KB	WindowsInstaller-KB893803-x86.exe	5/16/2005 4:42 PM	Application	2,525 KB
Name	Date modified	Type	Size																																			
ISSetupPrerequisites	10/13/2017 2:35 PM	File folder																																				
program files	10/13/2017 2:35 PM	File folder																																				
0x0409.ini	10/1/2014 10:41 AM	Configuration sett...	22 KB																																			
Autorun.inf	5/26/2016 10:01 AM	Setup Information	1 KB																																			
Colorpro.msi	5/26/2016 10:07 AM	Windows Installer ...	2,563 KB																																			
setup.exe	5/26/2016 10:06 AM	Application	1,542 KB																																			
Setup.ini	5/26/2016 10:07 AM	Configuration sett...	7 KB																																			
WindowsInstaller-KB893803-x86.exe	5/16/2005 4:42 PM	Application	2,525 KB																																			
9.	Prerequisites will Install	<p>ColorPro will install prerequisites. *Please note: Your Prerequisites list may look different. May maintain less or more then what appears in example below. Also this may take 10-15 minutes*</p>  <p>The screenshot shows the 'Colorpro - InstallShield Wizard' dialog box with the following table of prerequisites:</p> <table border="1"> <thead> <tr> <th>Status</th> <th>Requirement</th> </tr> </thead> <tbody> <tr> <td>Pending</td> <td>Microsoft SQL Server 2005 Exp SP2</td> </tr> <tr> <td>Pending</td> <td>Microsoft SQL Server 2005 SSMSEE</td> </tr> <tr> <td>Pending</td> <td>CrystalReports11_5_NET_2005</td> </tr> <tr> <td>Pending</td> <td>QuickTime Player 7.65.17.80</td> </tr> <tr> <td>Pending</td> <td>Apple Application Support 1.1.0</td> </tr> </tbody> </table>	Status	Requirement	Pending	Microsoft SQL Server 2005 Exp SP2	Pending	Microsoft SQL Server 2005 SSMSEE	Pending	CrystalReports11_5_NET_2005	Pending	QuickTime Player 7.65.17.80	Pending	Apple Application Support 1.1.0																								
Status	Requirement																																					
Pending	Microsoft SQL Server 2005 Exp SP2																																					
Pending	Microsoft SQL Server 2005 SSMSEE																																					
Pending	CrystalReports11_5_NET_2005																																					
Pending	QuickTime Player 7.65.17.80																																					
Pending	Apple Application Support 1.1.0																																					

STEP	ACTION	INSTRUCTION
10	Continuing ColorPro Installation	<p>After all prerequisites are installed the ColorPro install wizard will appear <Click> “Next”.</p> 
11	Continuing ColorPro Installation	<p>ColorPro will self-install <Click> “Next” when prompted.</p> 

STEP	ACTION	INSTRUCTION
12	Continuing ColorPro Installation	<p>Once ColorPro loads successfully <Click> “Finish” when prompted.</p> 
13	Install complete	Return to the Windows Desktop Screen and you will see Color Pro icon

STEP	ACTION	INSTRUCTION																																				
14	Start Installation FMLIB files	<p>*Please note, If the calibration and machine configuration were backed up, continue with the following steps. If not, continue to step 20 *</p> <p>After the installation of ColorPro is complete you will need to load the calibration and machine configuration you previously backed up.</p>																																				
15	Continue	<p>From flash drive <DOUBLE CLICK> on the FMLIB folder</p>  <table border="1" data-bbox="532 953 1508 1415"> <thead> <tr> <th>Name</th> <th>Date modified</th> <th>Type</th> <th>Size</th> </tr> </thead> <tbody> <tr> <td>fmlib</td> <td>5/8/2018 11:11 AM</td> <td>File folder</td> <td></td> </tr> <tr> <td>FTDI_CDM v2.12.14 Certified</td> <td>3/8/2018 11:31 AM</td> <td>File folder</td> <td></td> </tr> <tr> <td>IDD Test</td> <td>3/8/2018 11:31 AM</td> <td>File folder</td> <td></td> </tr> <tr> <td>language</td> <td>3/8/2018 11:31 AM</td> <td>File folder</td> <td></td> </tr> <tr> <td>Serial</td> <td>3/8/2018 11:31 AM</td> <td>File folder</td> <td></td> </tr> <tr> <td>Sim</td> <td>3/8/2018 11:31 AM</td> <td>File folder</td> <td></td> </tr> <tr> <td>USB</td> <td>3/8/2018 11:31 AM</td> <td>File folder</td> <td></td> </tr> <tr> <td>29252_DVX_PUMP.BIN</td> <td>1/14/2009 1:35 PM</td> <td>BIN File</td> <td>4</td> </tr> </tbody> </table>	Name	Date modified	Type	Size	fmlib	5/8/2018 11:11 AM	File folder		FTDI_CDM v2.12.14 Certified	3/8/2018 11:31 AM	File folder		IDD Test	3/8/2018 11:31 AM	File folder		language	3/8/2018 11:31 AM	File folder		Serial	3/8/2018 11:31 AM	File folder		Sim	3/8/2018 11:31 AM	File folder		USB	3/8/2018 11:31 AM	File folder		29252_DVX_PUMP.BIN	1/14/2009 1:35 PM	BIN File	4
Name	Date modified	Type	Size																																			
fmlib	5/8/2018 11:11 AM	File folder																																				
FTDI_CDM v2.12.14 Certified	3/8/2018 11:31 AM	File folder																																				
IDD Test	3/8/2018 11:31 AM	File folder																																				
language	3/8/2018 11:31 AM	File folder																																				
Serial	3/8/2018 11:31 AM	File folder																																				
Sim	3/8/2018 11:31 AM	File folder																																				
USB	3/8/2018 11:31 AM	File folder																																				
29252_DVX_PUMP.BIN	1/14/2009 1:35 PM	BIN File	4																																			

STEP	ACTION	INSTRUCTION
16	Continue	<p><Open> folder and copy the PRP Files</p> <p>*Please note, the amount of PRP files may be different then what appears below.*</p> 
17	Continue	<p><Paste> the PRP files into the FMLIB folder.</p> <p>Navigate to the FMLIB folder byfollowing the path listed below.</p> <p>(64bit PC) C:\Program Files (x86)\Fluid Management\IDDdvx\FMLIB</p> <p>(32bit PC) C:\Program Files\Fluid Management\IDDdvx\FMLIB</p> 

STEP	ACTION	INSTRUCTION
18	Installation of MCL.INI	<p>Next you will need to load the MCL.INI file you previously backed up. <Copy> the MCL.INI file from your flash drive <Paste> in the IDDdvx folder.</p> <p>Navigate to the IDDdvx folder by following the path listed below:</p> <p>(64bit PC) C:\Program Files (x86)\Fluid Management\IDDdvx (32bit PC) C:\Program Files\Fluid Management\IDDdvx</p> 
19	Finish	<p>At this point you have completed installing your back PRP files and MCL.INI file.</p>
20		<p>To confirm that ColorPro works. Open program and do a command: (Dispense, Purge, or Agitate)</p> <p>If program does not open, errors appear. Please contact Fluid Management Technical Support Team.</p> <p>1.800.462.2466 prompt for technical assistance. Please have the serial number of the Accutinter.</p>