



Fluid Management[®]

ESTABLISHING COMMUNICATIONS WITH COLOR DESIGNER PLUS

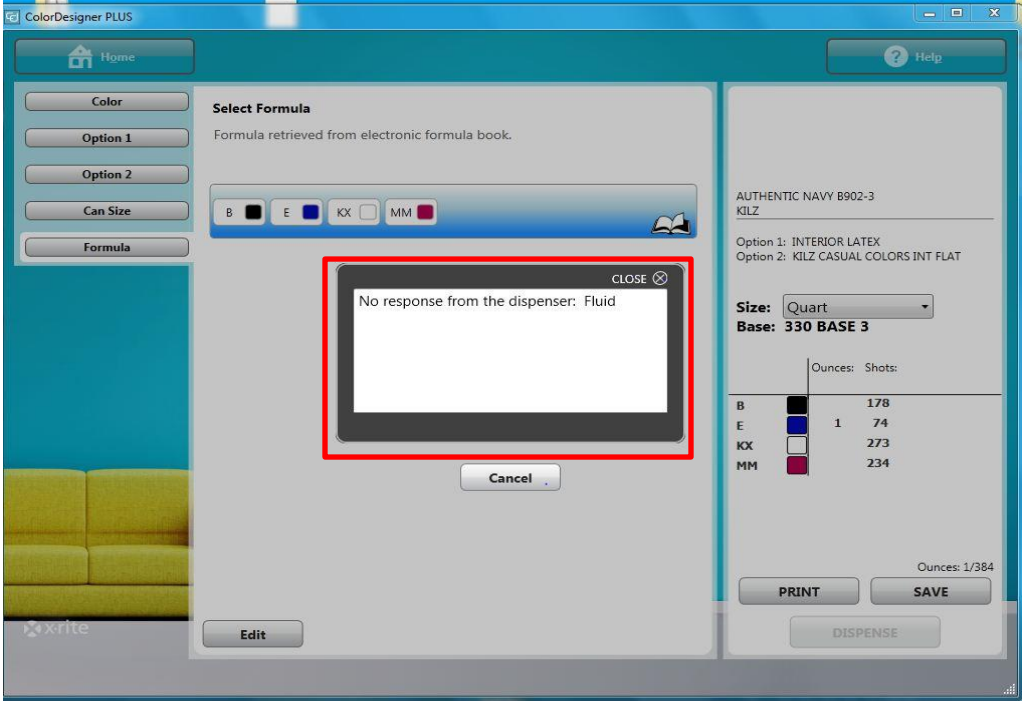


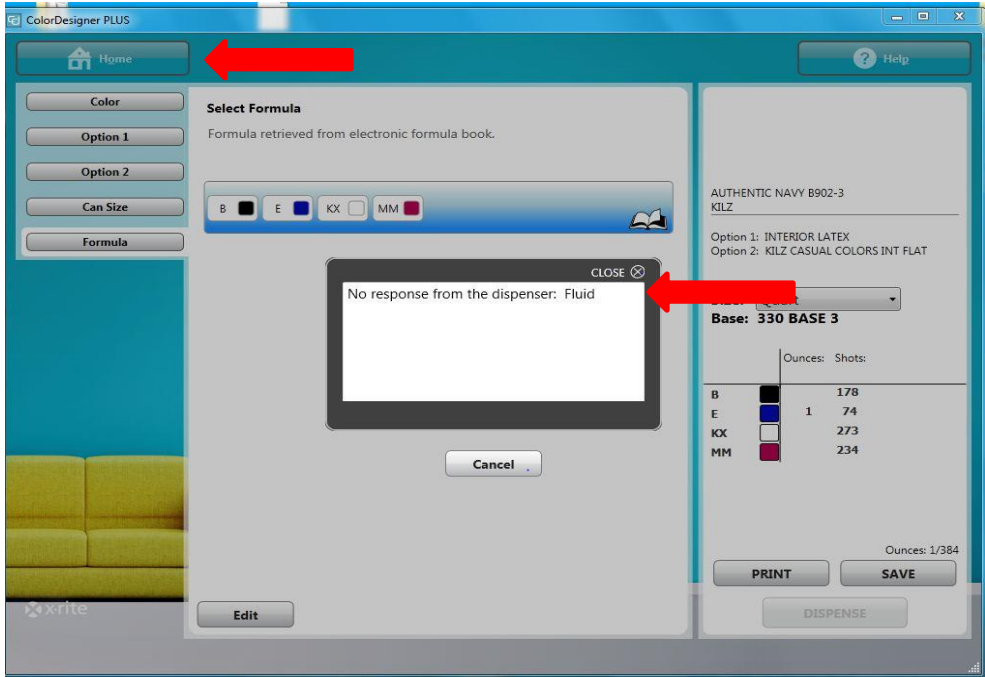

Fluid Management[®]

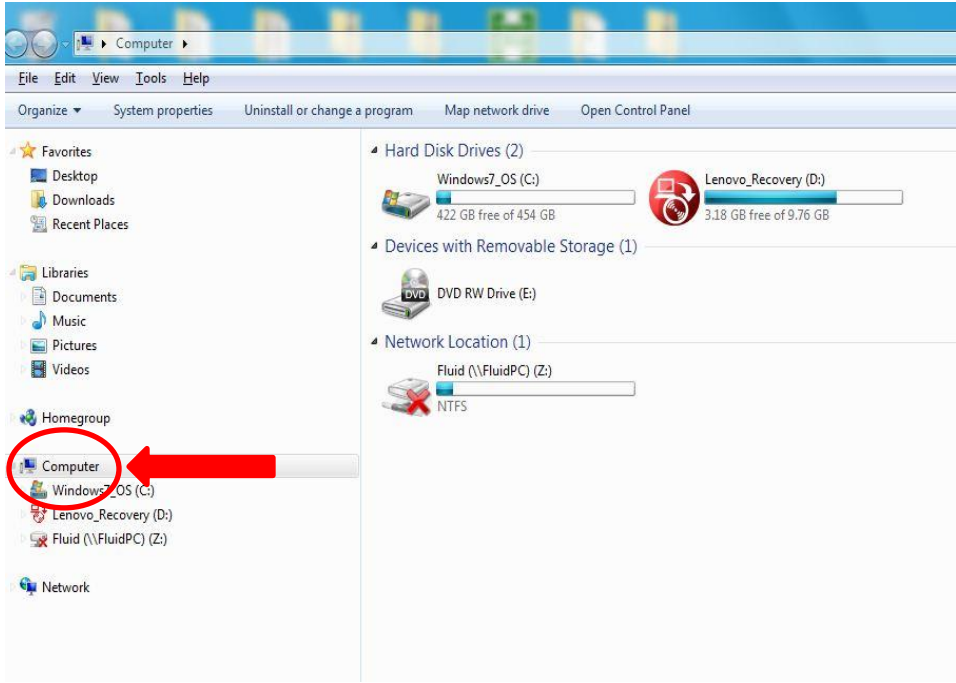
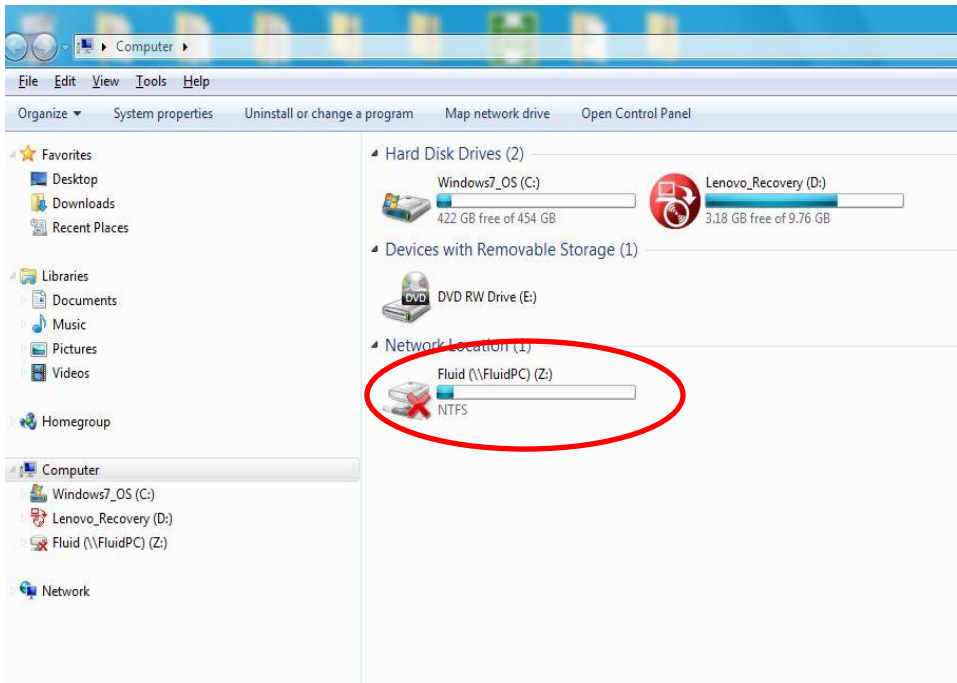
**Fluid Management
NO COMMS WITH SPECTRO**

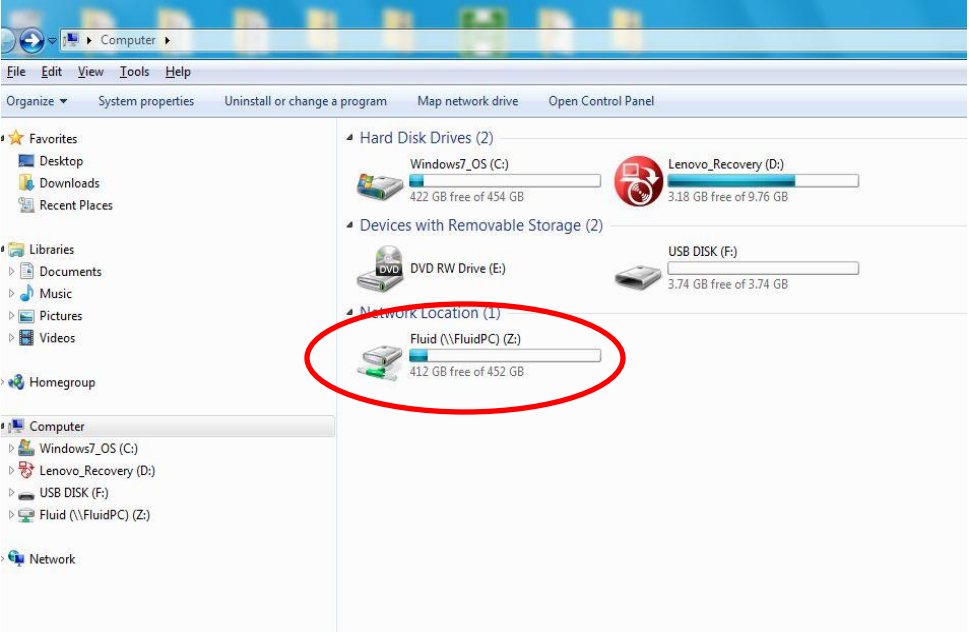
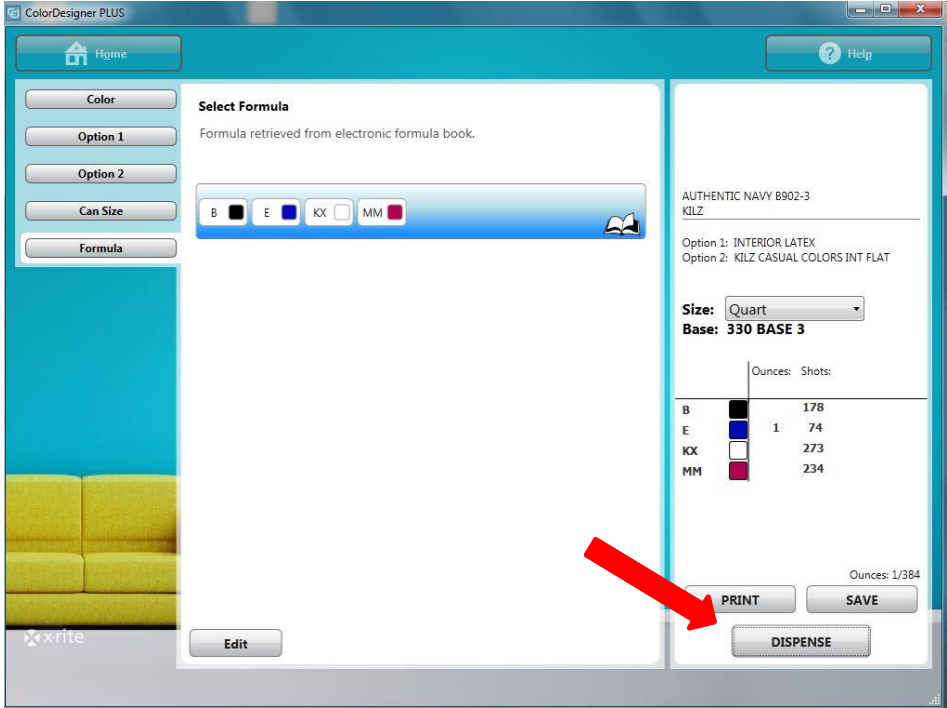


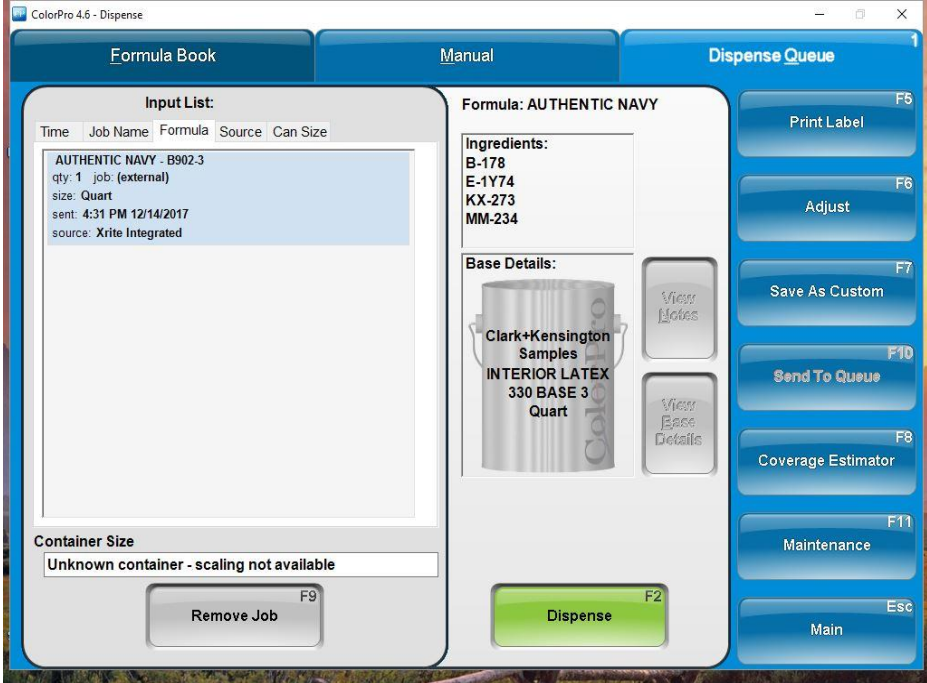
<i>Prepared by</i>	<i>Document Control Number</i>	<i>Document Title</i>	<i>Date</i>	<i>Rev</i>
Michael Hargett	-	ESTABLISHING COMMUNICATIONS WITH COLOR DESIGNER PLUS	12/15/17	A

STEP	ACTION	INSTRUCTION															
1	Verify Systems	Verify both the Color Designer and Color Pro computers are on and the network cables are connected.															
2	Error	<p>Using store procedures attempt to send a formula from Color Designer to Color Pro.</p>  <p>The screenshot shows the ColorDesigner PLUS interface. A central dialog box with a red border displays the error message: "No response from the dispenser: Fluid". The dialog box has a "CLOSE" button in the top right corner and a "Cancel" button below it. The background software interface includes a "Select Formula" section with color swatches (B, E, KX, MM), a "Size" dropdown set to "Quart", and a "Base" dropdown set to "330 BASE 3". A table on the right lists color options and their corresponding ounce and shot counts:</p> <table border="1" data-bbox="1218 840 1477 966"> <thead> <tr> <th></th> <th>Ounces:</th> <th>Shots:</th> </tr> </thead> <tbody> <tr> <td>B</td> <td>178</td> <td></td> </tr> <tr> <td>E</td> <td>74</td> <td>1</td> </tr> <tr> <td>KX</td> <td>273</td> <td></td> </tr> <tr> <td>MM</td> <td>234</td> <td></td> </tr> </tbody> </table> <p>At the bottom right, there are buttons for "PRINT", "SAVE", and "DISPENSE", along with the text "Ounces: 1/384".</p>		Ounces:	Shots:	B	178		E	74	1	KX	273		MM	234	
	Ounces:	Shots:															
B	178																
E	74	1															
KX	273																
MM	234																

STEP	ACTION	INSTRUCTION
3	Close Color Designer	<p>Select <CLOSE> Select <HOME></p> 
4	Navigate to Computer	<p>Bottom left corner click on the Windows Start Ball.</p> 

STEP	ACTION	INSTRUCTION
5.	Navigate to Drives	Navigate to Computer 
6.	Locate Network	Locate the networked drive - “Red” X indicates “OFF” Double click on the network titled “Fluid” with the “Red” X 

STEP	ACTION	INSTRUCTION
7.	Activate Network	<p>Network is now activated – GREEN indicates active network drive.</p>  <p>The screenshot shows the Windows 7 'Computer' window. The left sidebar lists 'Favorites', 'Libraries', and 'Computer'. Under 'Computer', the drive 'Fluid (\FluidPC) (Z:)' is listed. In the main pane, under 'Network Location (1)', the drive 'Fluid (\FluidPC) (Z:)' is shown with a green status icon and is circled in red. Other drives shown include Windows7_OS (C:), Lenovo_Recovery (D:), DVD RW Drive (E:), and USB DISK (F:).</p>
8.	Open Color Designer	<p>Following store procedures open color designer and attempt to send a formula. Click <DISPENSE></p>  <p>The screenshot shows the 'ColorDesigner PLUS' software interface. On the left, there are buttons for 'Home', 'Color', 'Option 1', 'Option 2', 'Can Size', and 'Formula'. The main area is titled 'Select Formula' and shows 'Formula retrieved from electronic formula book.' Below this are color selection buttons for B (black), E (blue), KX (white), and MM (magenta). On the right, there are settings for 'Size: Quart' and 'Base: 330 BASE 3'. A table shows 'Ounces' and 'Shots' for each color: B (178), E (74), KX (273), and MM (234). At the bottom right, there are buttons for 'PRINT', 'SAVE', and 'DISPENSE'. A red arrow points to the 'DISPENSE' button.</p>

STEP	ACTION	INSTRUCTION
9.	Color Pro Receives Formula	<p>SUCCESSFUL FORMULA TRANSFER</p> 
10.	Communications Established	<p>If The Formula does not appear in Color Pro contact:</p> <p>MATCH RITE 800-572-4626</p> <p>OR</p> <p>FLUID MANAGEMENT 800-462-2466</p>