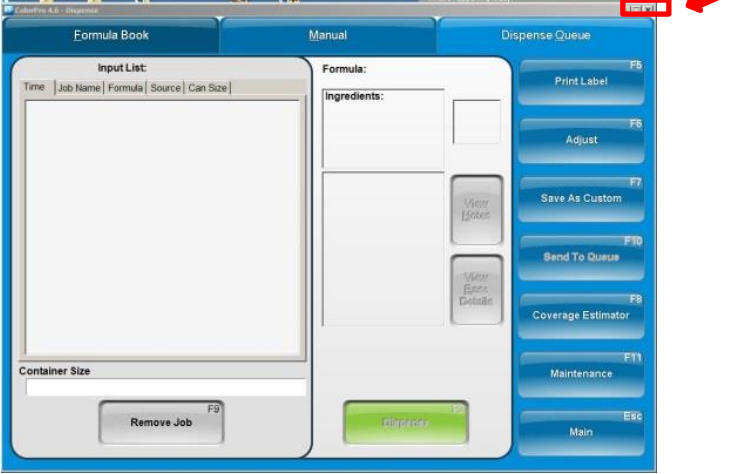
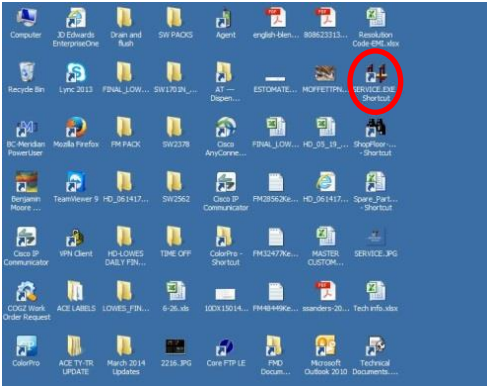



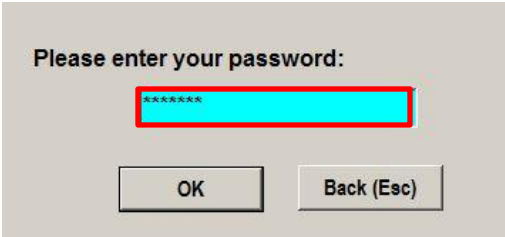
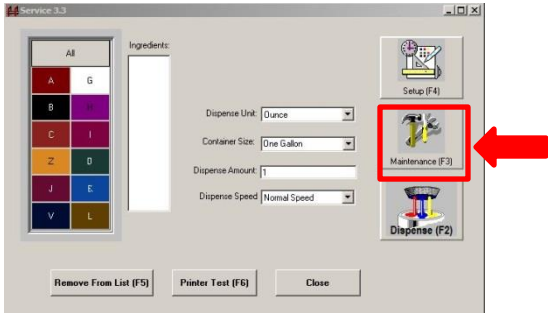
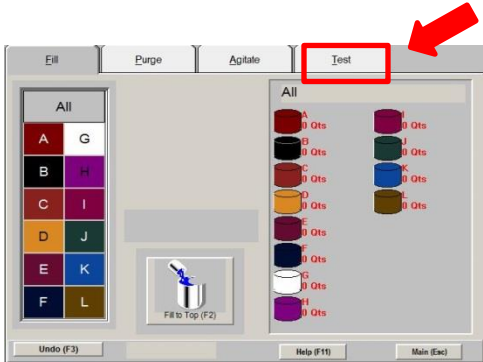
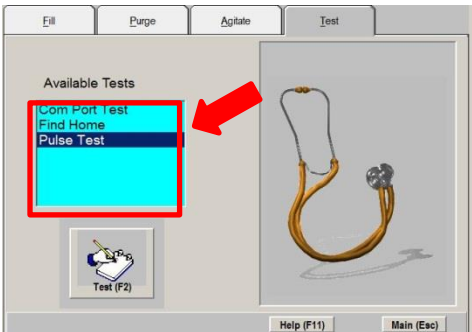


Fluid Management®

**Fluid Management
PULSE TEST PROCEDURES**


<i>Prepared by</i>	<i>Document Control Number</i>	<i>Document Title</i>	<i>Date</i>	<i>Rev</i>
Michel L. Hargett, Sr.	-	Fluid Management Pulse Test Playbook	07/55/17	A

STEP	ACTION	INSTRUCTION
1.	Exit Color Pro	<p>Completely Exit< Color Pro></p>  <p style="text-align: center;">Caution!</p> <p style="text-align: center;">Do Not "Minimize"</p> <p style="text-align: center;">Completely Exit Color Pro</p>
2.	Desktop Screen	<p>At The Window Desktop Screen (With All The Icons)</p> 
3.	Open Service	<p><DOUBLE CLICK> The Red Bride Icon Titled "Service"</p> 

4.	Enter Password	Enter Password “ service ” (All Lower Case) 
5.	Maintenance Tab	Click On < MAINTENANCE > On The Right Center Tab 
6.	Test Tab	Click On < TEST > On The Upper Right Tab 
7.	Select Pulse Test	Select Pulse Test In The Left Green Box 

8. Select Test

Click On <TEST>

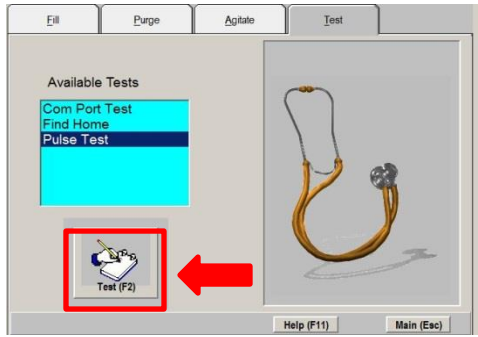

9. Pulse Test

Pulse Test Will Pass/Fail

Note

*****If There Are Any Pump Failures It Will Be Listed Here*****

“4423 Encoder Pulse Failure”

“Motor Failed In Canister Containing...”

Click <OK>


10. Exit Test

Click <MAIN>



11

SELECT THE COLOR WITH THE PULSE FAILURE FROM THE LEFT

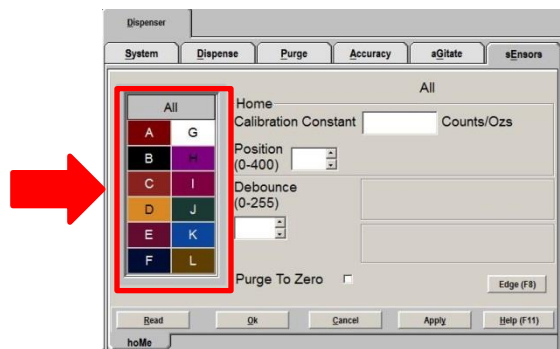


12.

Warning!


Place Purge Can Under Nozzle

In The "FORWARD" And "BACK" Steps Change The Number "10" To 400 In Each Box.

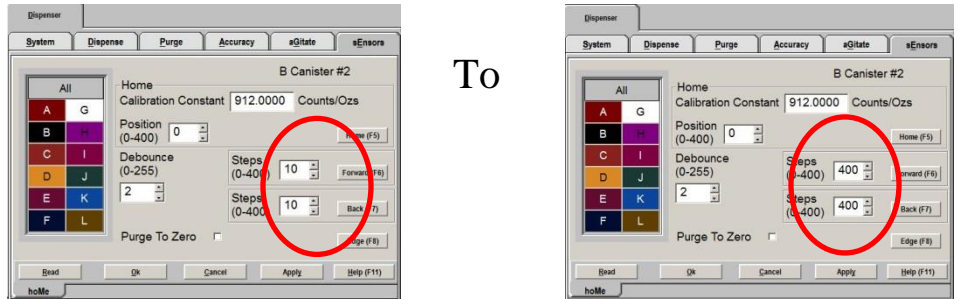


13.

Click <BACK>

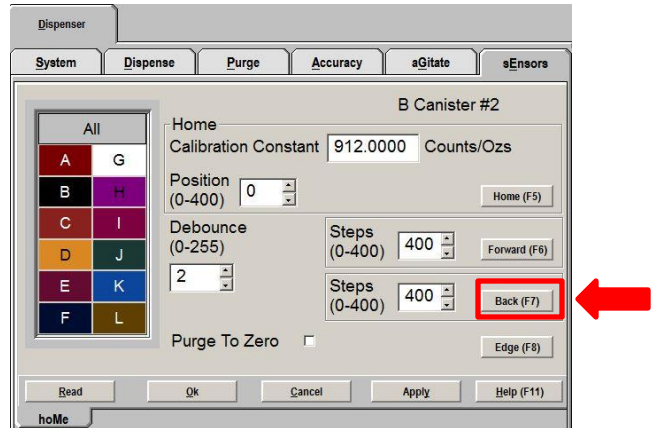


14.

Click <OK>

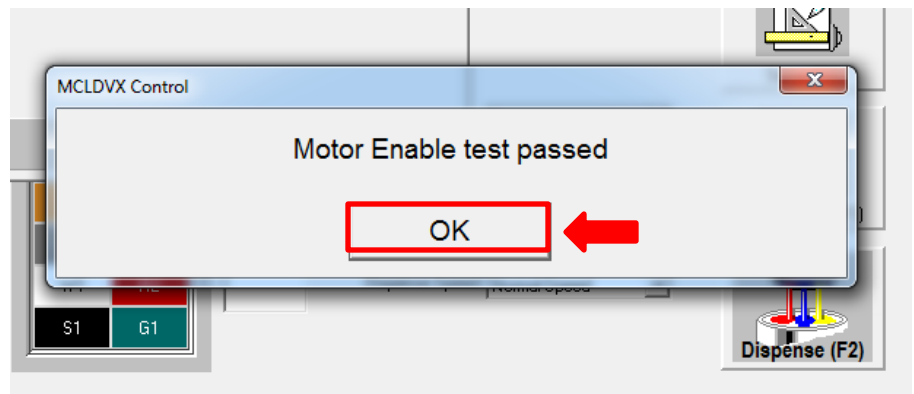


15.

Click <OK>

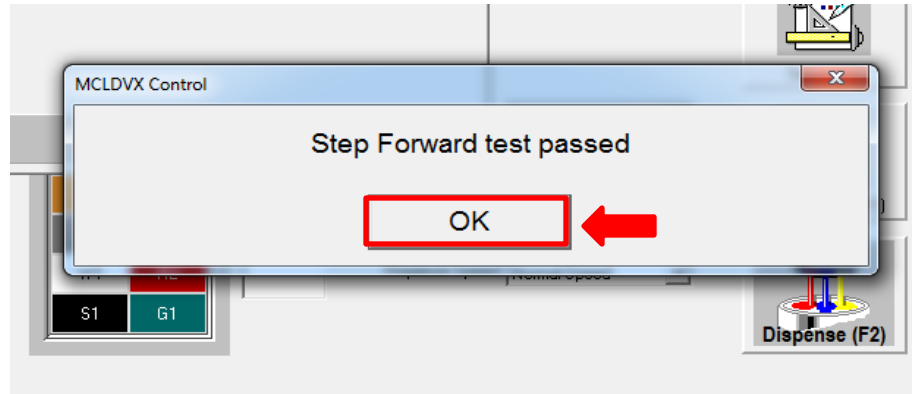

16.


Click <OK>

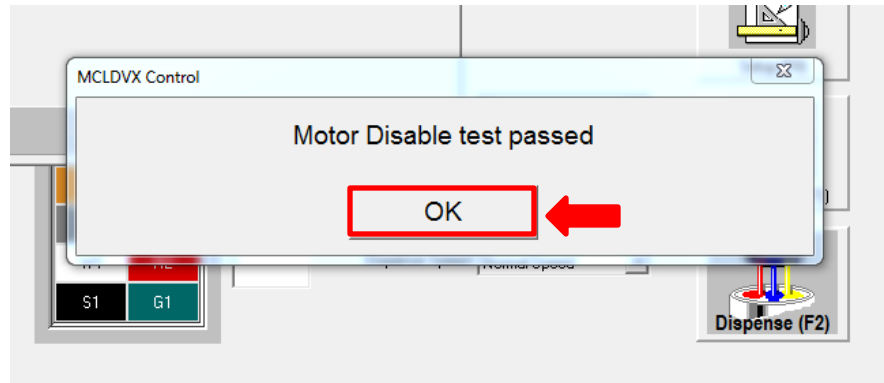

17.

Repeat


**IF NO THERE IS NO CHANGE IN THE SOUND OF THE PUMP
REPEAT STEPS 17 – 20 CONSECITIVELY TEN TIMES
REPEAT STEPS 17 – 20 AGAIN IN THE FORWARD DIRECTION**

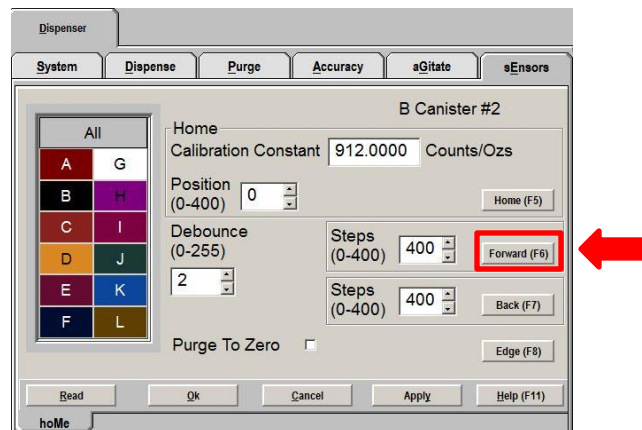

18.

Find Home


Click On <HOME>

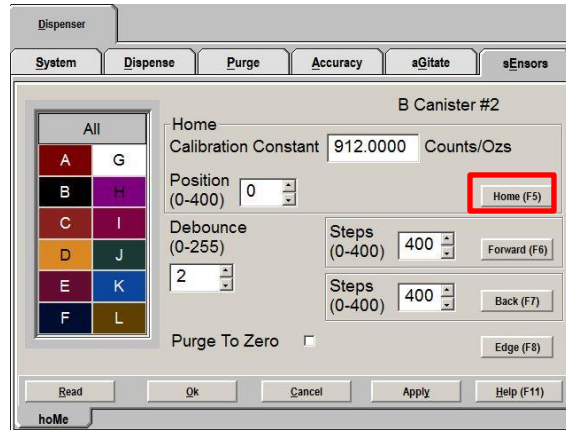

19.


Exit To Service Main Menu

Click On <CANCEL>

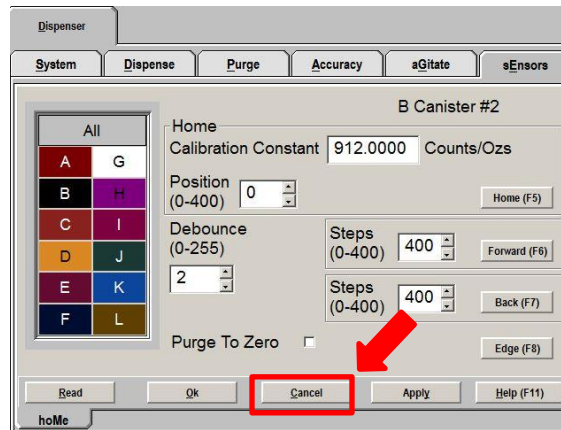

24.


Click <MAIN(ESC)>

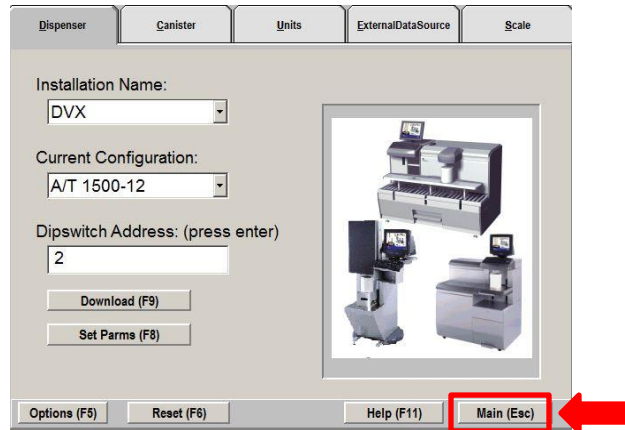

25.


Attempt to Dispense

Double click color with the pulse failure from the left

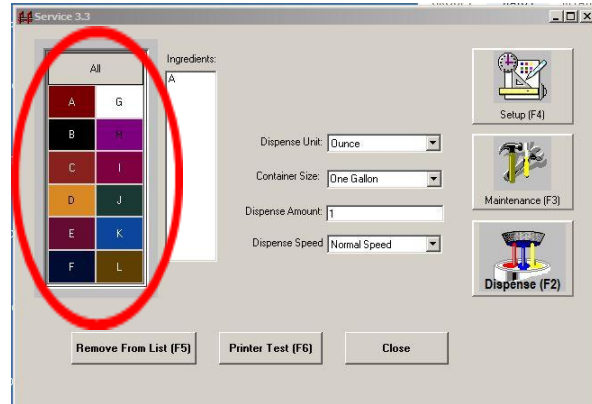

26.

Color will appear in the ingredients list

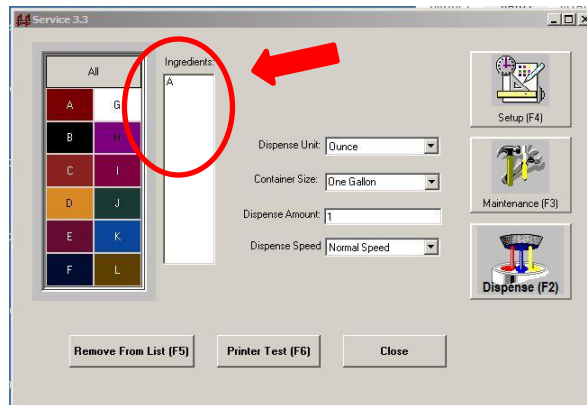


27.

WARNING!

PLACE PURGE CAN UNDER NOZZLE

Click **<DISPENSE>**

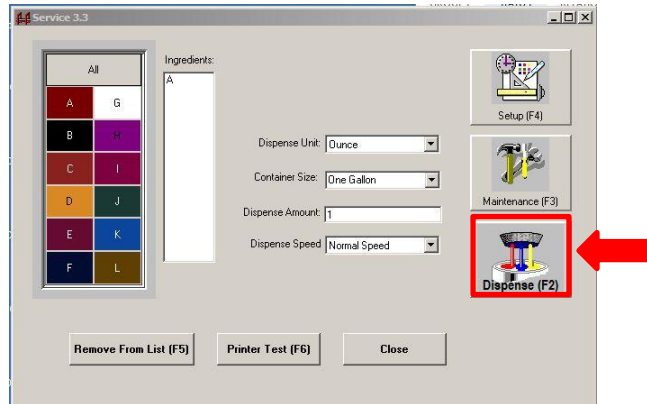


28.

WARNING!

PLACE PURGE CAN UNDER NOZZLE

Click **<DISPENSE>**

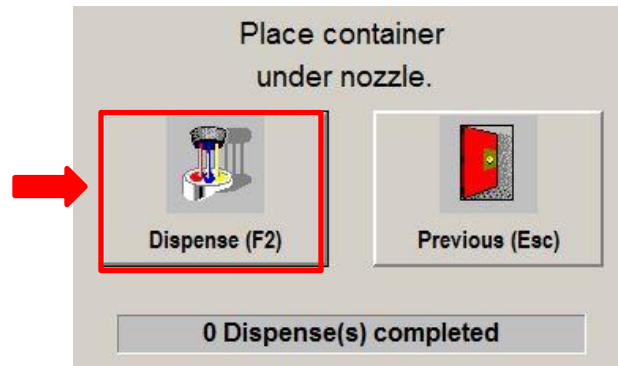


29. Unit Will Dispense




30. Dispense Completes

Click <DONE>

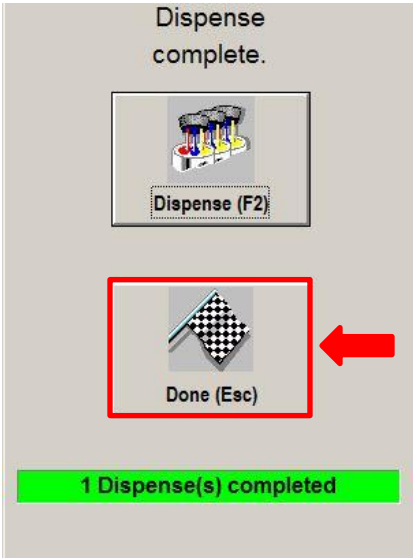

31. Close Service

Click <CLOSE>

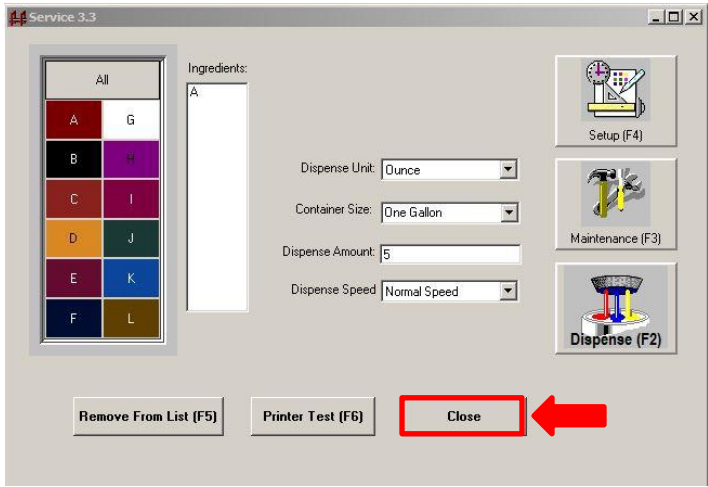

32.

Return To Desktop Screen

Click <COLOR PRO>



33.

Open Color Pro

